


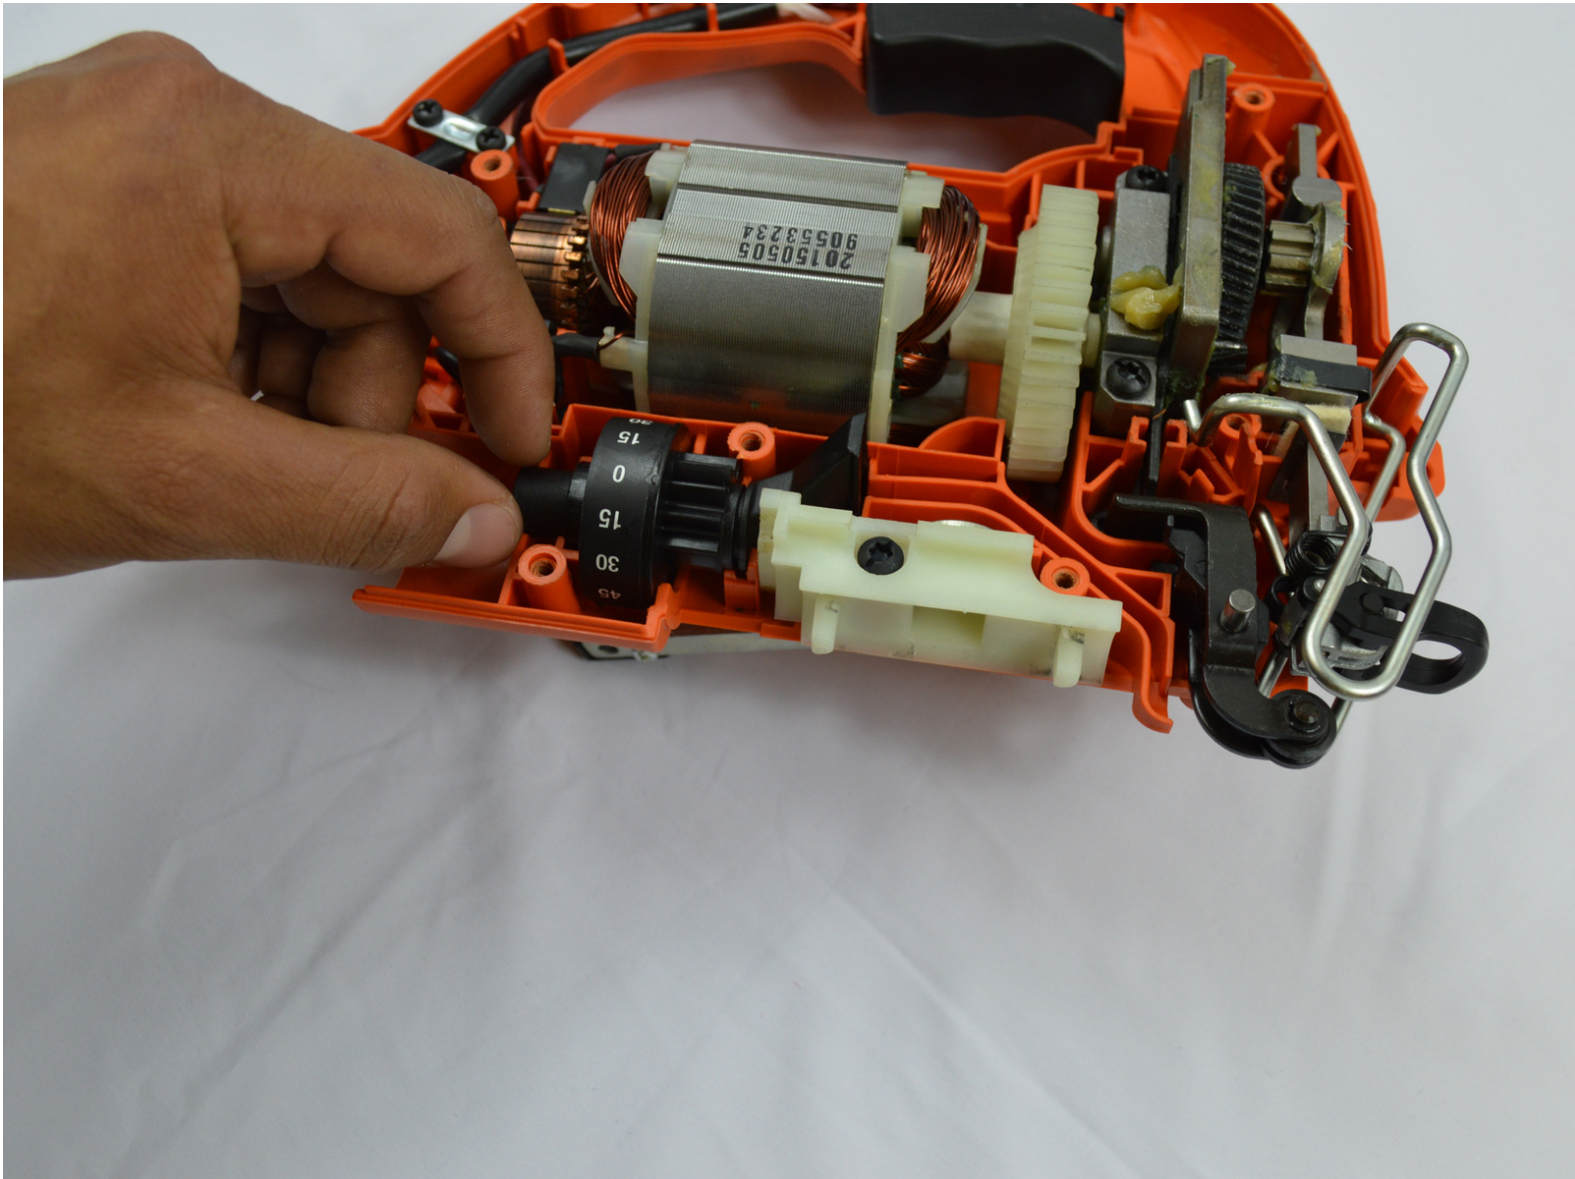

# Black and Decker JS660 Angle Knob Replacement

The angle is set to a certain degree but not cutting at the selected angle. It needs to be replaced.

Written By: Andrew Khouri



## INTRODUCTION

This guide will give users a step by step on how to replace the angle indication knob on the jigsaw. You will need to by the replacement parts from the link given in the details.

---



### TOOLS:


- [Screwdriver](#) (1)
-

## Step 1 — Base



- Unscrew the nine screws to open up the jigsaw



## Step 2

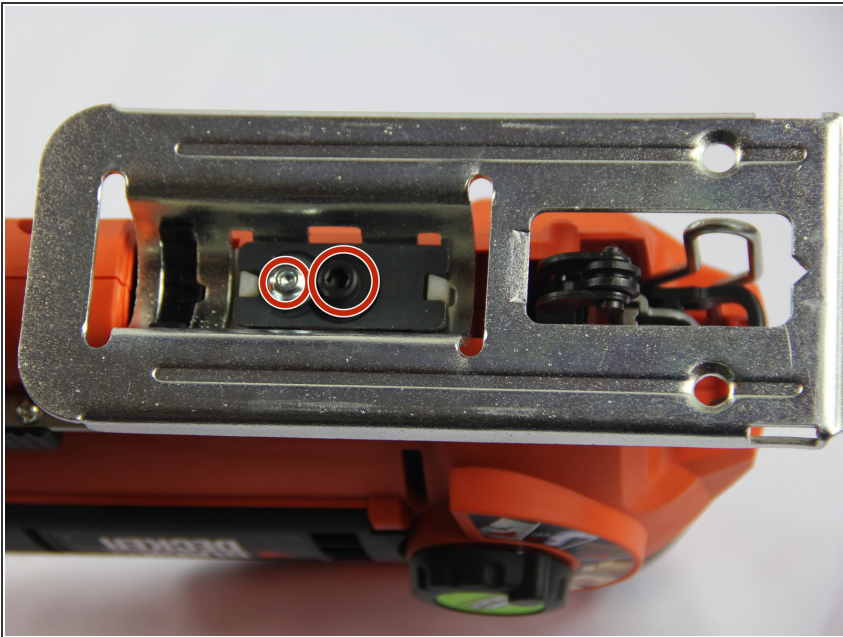


- Unscrew the base by unscrewing the two shown in the picture.






### Step 3

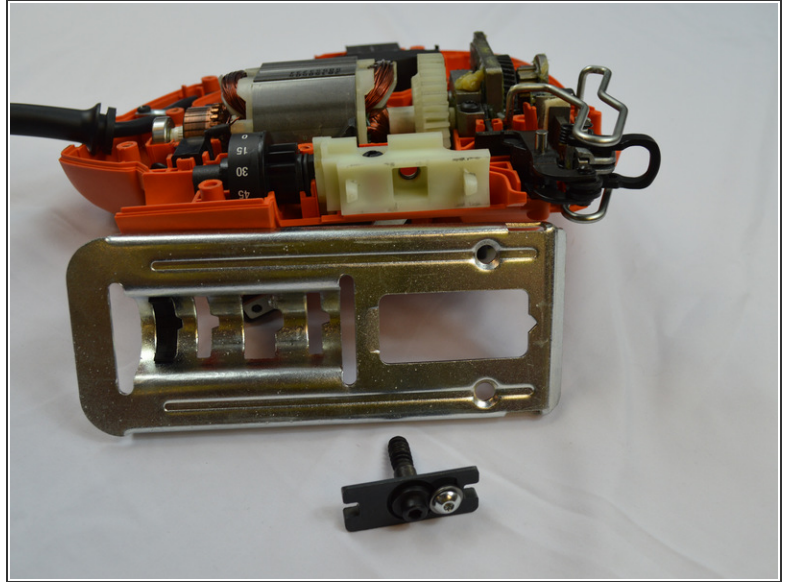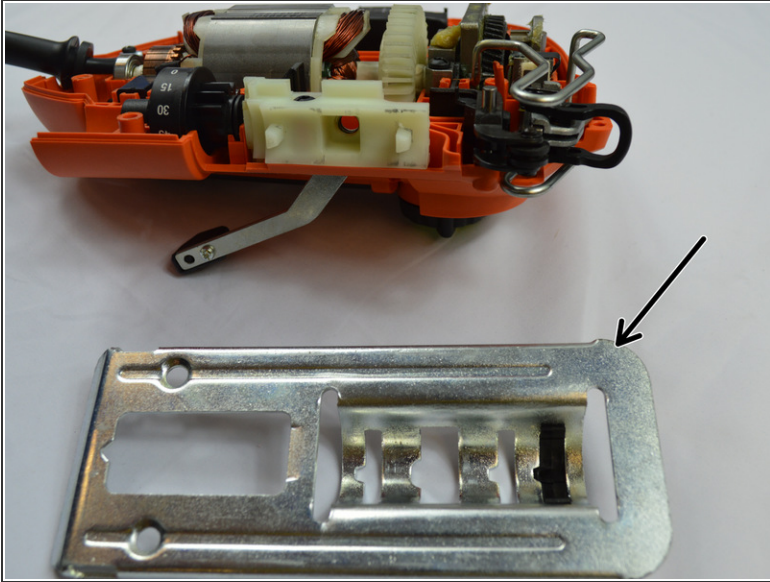

- The Jigsaw base will now be off. With the new base simply do the reverse order of steps.

 Assemble the base on a steady surface.

### Step 4 — Angle Knob

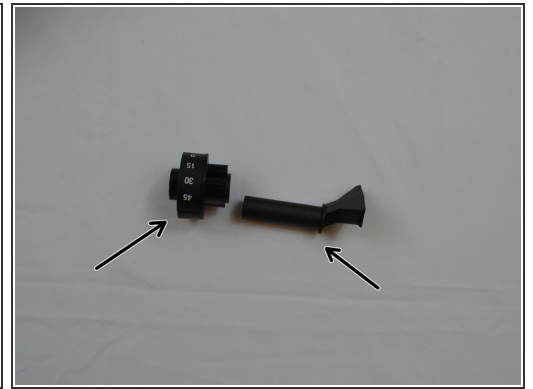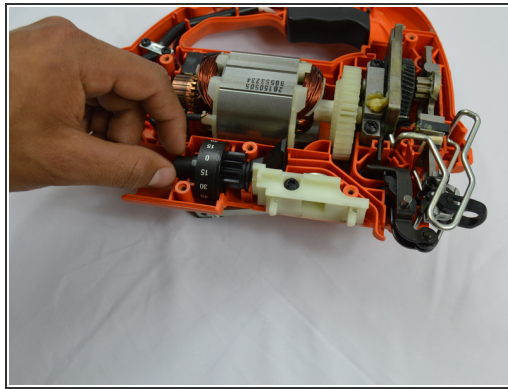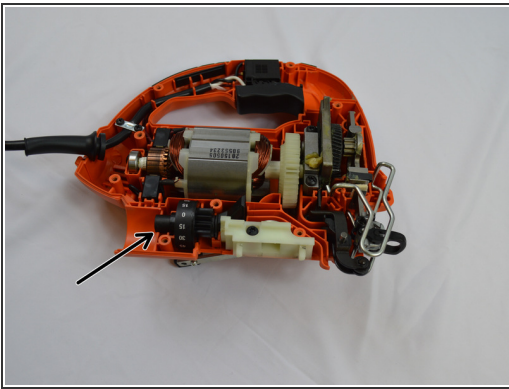

- As soon you disassemble the device, you can see the angel knob is not attached to any screws.
- You can easily pick it up and replace it.

 [replacment](#)

To reassemble your device, follow these instructions in reverse order.

